

- A. ASSEMBLY AND INSTALLATION INSTRUCTIONS
- B. PARTS IDENTIFICATION, PARTS PRICES, TERMS AND ORDER PROCEDURE

AVATAR 2000TM Luggage rack

Please file with your AVATAR 2000TM Owner's Manual,
Sections A, B, C, D and E.

Rev. 12/81

A. ASSEMBLY AND INSTALLATION INSTRUCTIONS

Tool needed: 4 mm (5/32") hex key.

(1) Slide BOLT through STUD and screw it into the middle seat frame cross brace support as illustrated in Figure 1.

Please note: Do not overtighten bolts, otherwise studs will flare out which, in turn, will make it impossible to slide rack frame over them.

(2) Slide FRAME over STUDS as illustrated in Figure 2.

(3) Place the SUSPENSION STRAPS under the tabs of FRAME, guide them over the upper frame cross brace spacers (identified as part SEA-108 and illustrated in Section D, page 27 of the AVATAR 2000™ Owner's Manual) and secure them with the provided buckles.

Please note: Do not overtighten the suspension straps. Overtightening will result in the stud bolts to bend which, in turn, may cause them to break or fatigue. With the straps slightly tightened, the frame should be approximately parallel with the ground.

(4) Thread TIGHTENING LINE fastened to RING through COVER loops as illustrated in Figure 3, pull it reasonably tight and fasten it back to the RING. If the RING is off center, adjust it accordingly, using the fender as a guide.

(5) Thread SHOCK CORD through remaining COVER loops and secure it as illustrated in Figure 3.

(6) Tie the ANCHOR HOOKS in with the rear fender stays and apply the ANCHOR STRAPS as illustrated in Figure 4(b) and tighten them securely. If you do not have the optional adapter channels for panniers illustrated in Figure 4(b), apply the ANCHOR STRAPS as illustrated in Figure 4(a).

Figure 1:

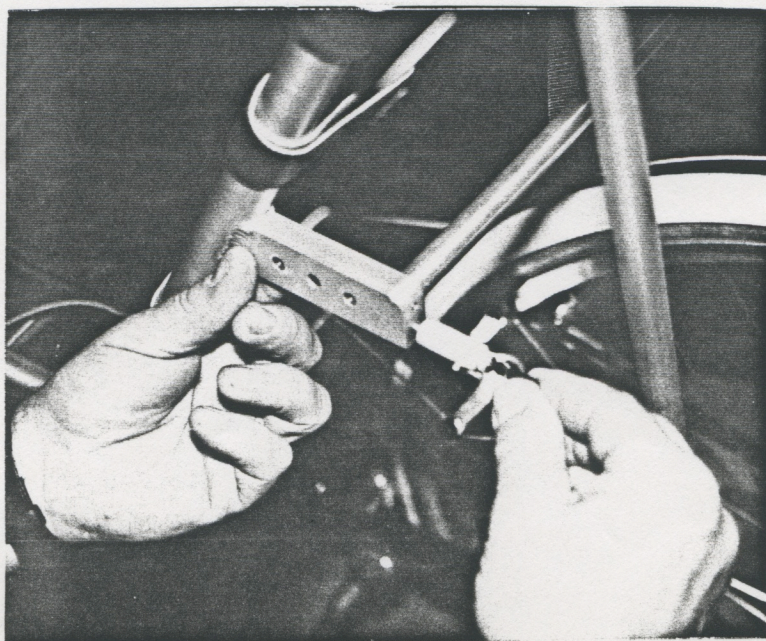


Figure 2:

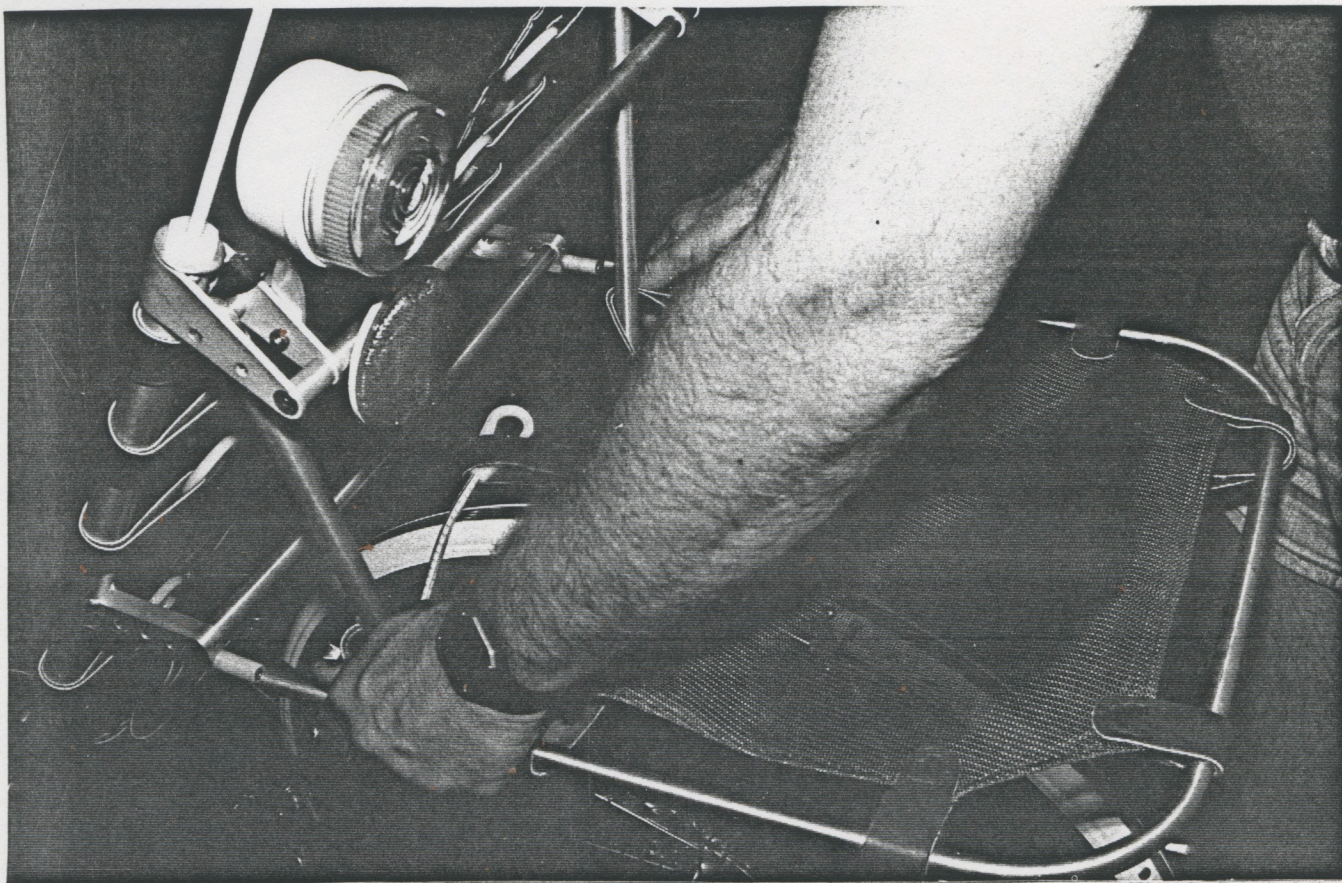


Figure 3:

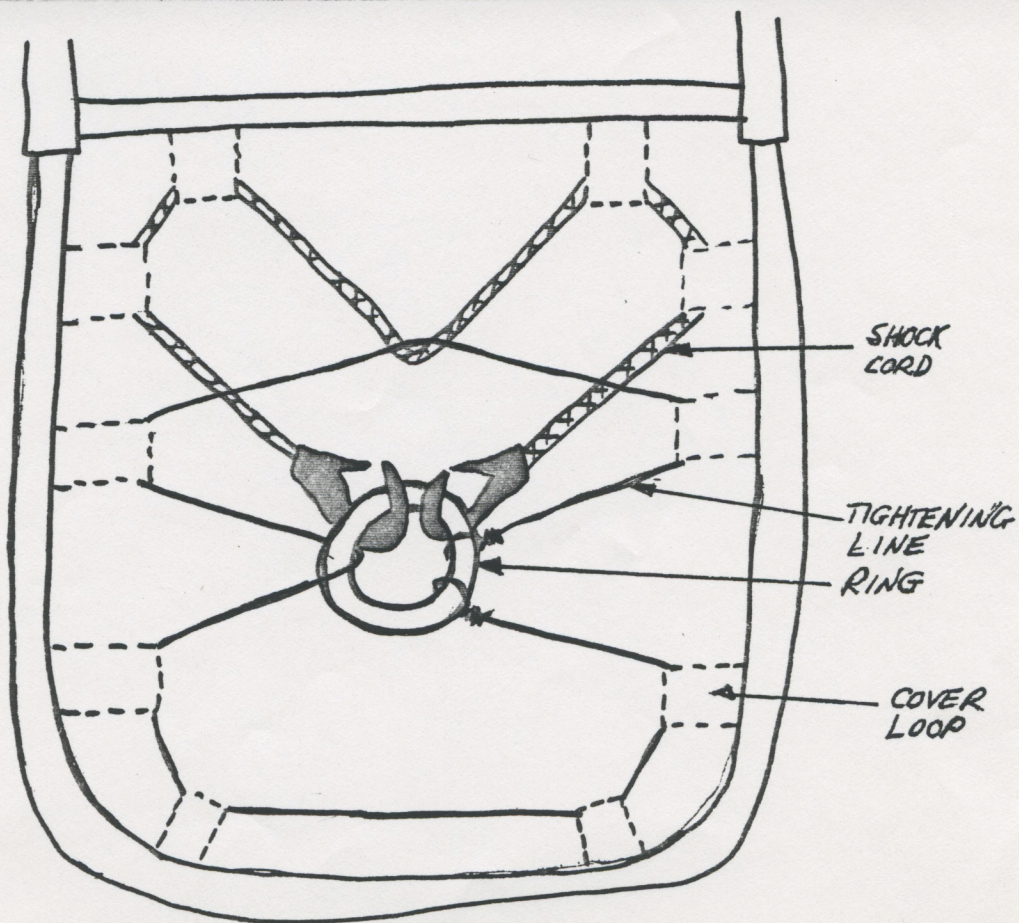


Figure 4 (b):


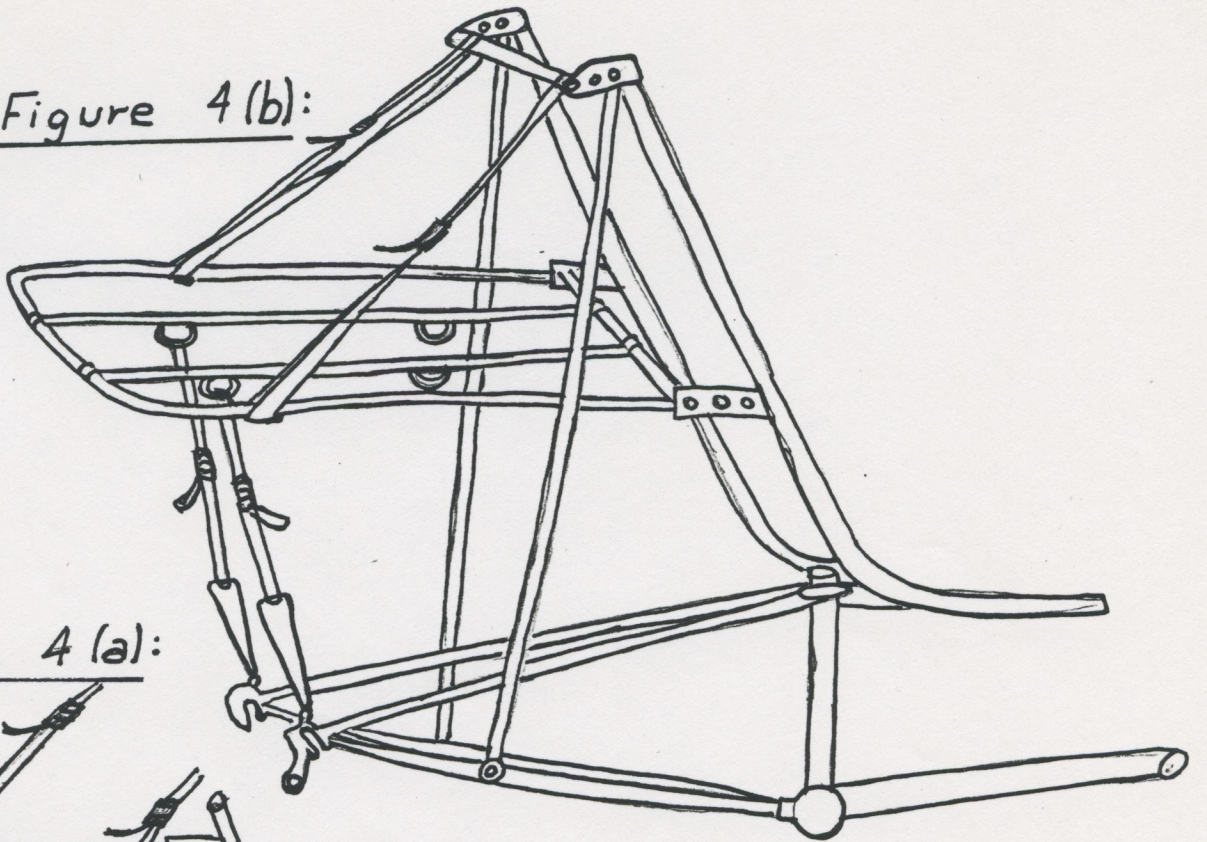



Figure 4 (a):

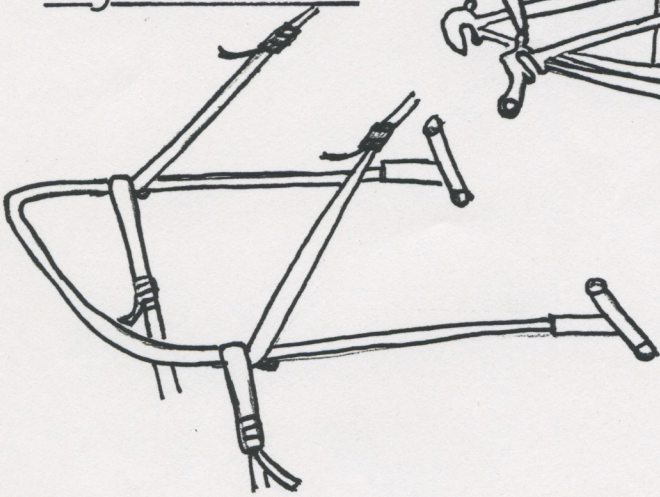


B. PARTS IDENTIFICATION, PARTS PRICES, TERMS AND ORDER PROCEDURE

(a) For purposes of clarity, all parts and assemblies relating to the luggage rack are prefixed LUG.

Order #	Description	Sold by	Quantity Needed per Accessory	Price
LUG-004	Frame	Piece	1 Piece	\$10.25
LUG-008	Bolt	Piece	1 Pair	1.90
LUG-012	Stud	Piece	1 Pair	1.95
LUG-016	Cover	Piece	1 Piece	30.25
LUG-020	Suspension strap	Piece	1 Pair	.95
LUG-024	Anchor strap	Piece	1 Pair	.95
LUG-028	Anchor hook	Piece	1 Pair	.95
LUG-032	Ring	Piece	1 Piece	.95
LUG-036	Tightening line	Piece	1 Piece	.95
LUG-040	Shock cord	Piece	1 Piece	4.95
LUG-900	Luggage rack complete with all necessary fittings	Assembly		56.95

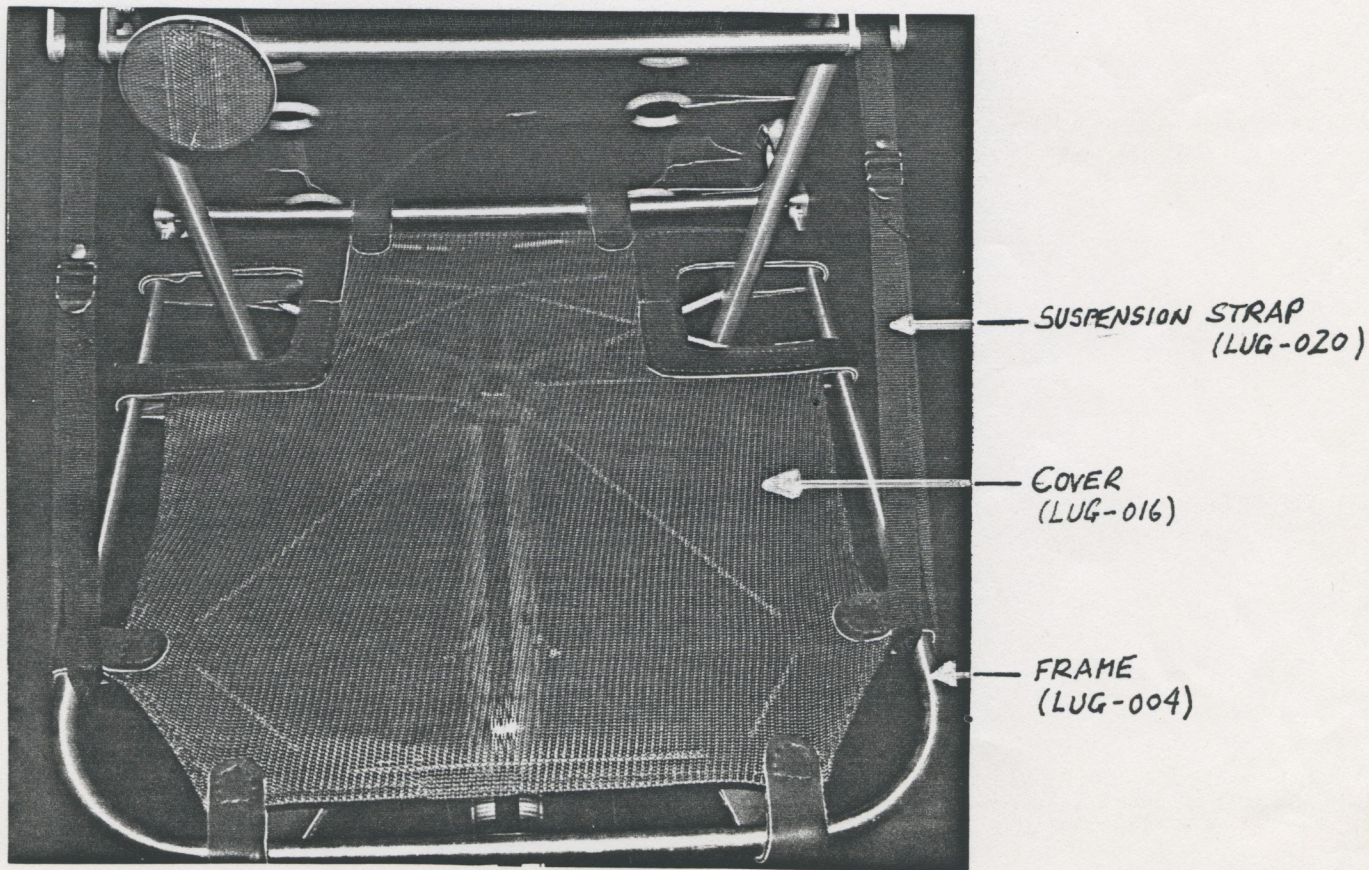


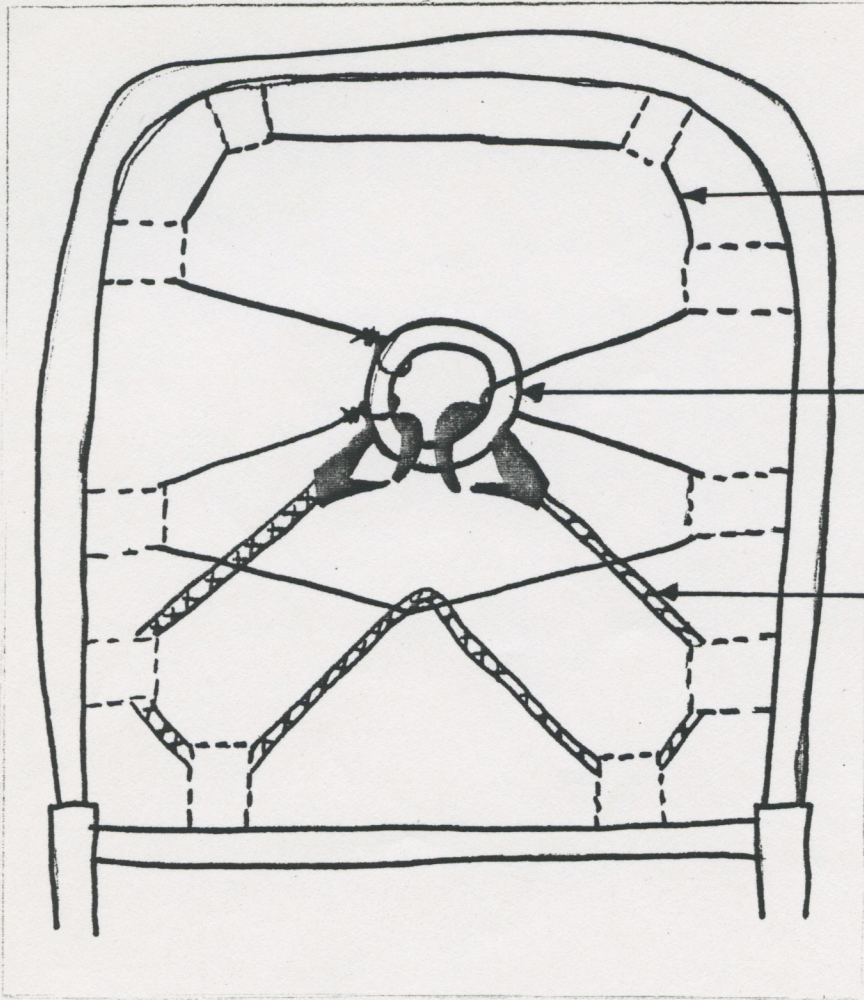


TIGHTENING LINE
(LUG-036)

RING (LUG-032)

SHOCK CORD
(LUG-040)

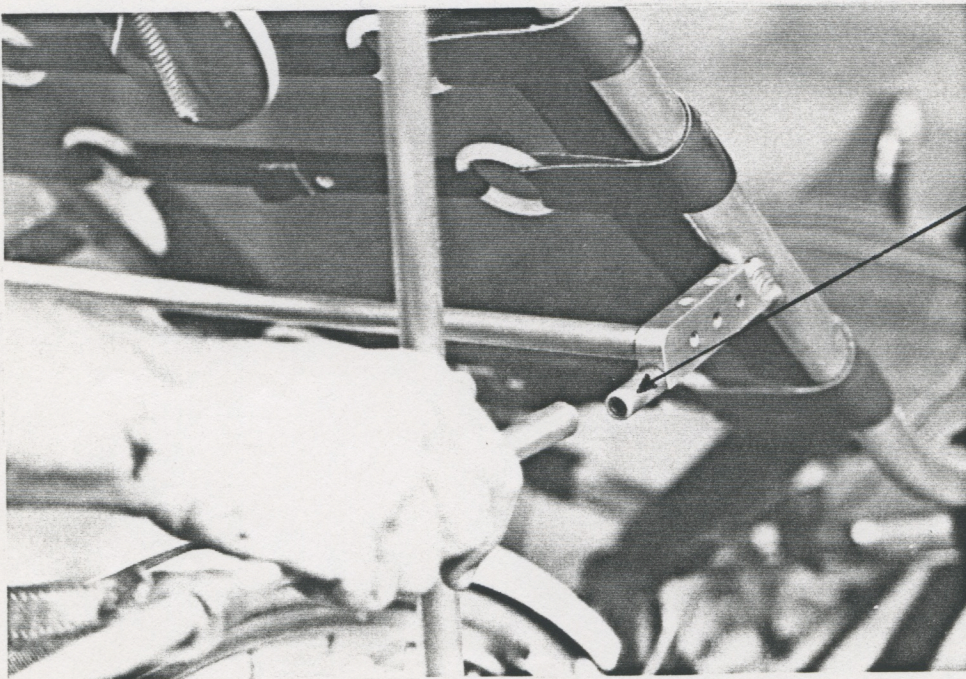

STUD (LUG-012)
WITH BOLT (LUG-008)
INSIDE

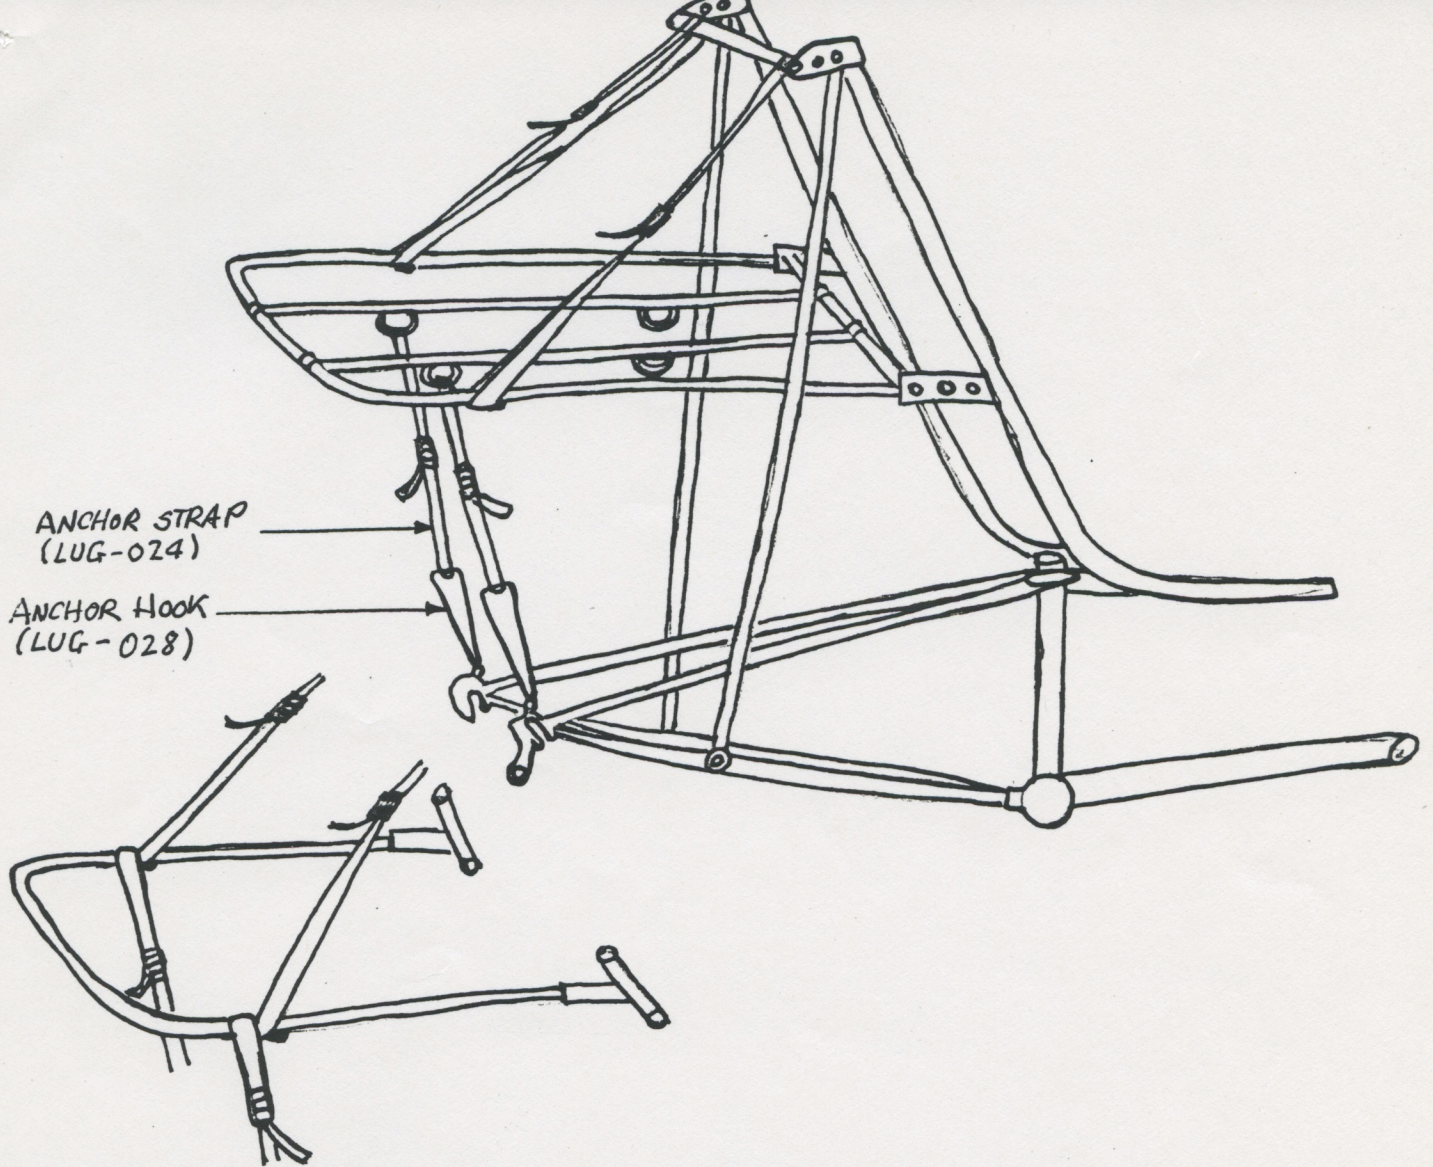

(b) Terms:

Are the same as outlined in Section D, page 34 of the AVATAR 2000™ Owner's Manual.

(c) Order procedure:

Are the same as outlined in Section D, page 34 of the AVATAR 2000™ Owner's Manual.